


Connecting the LabelWriter Wireless Label Printer to your Wireless Network

You will need the wireless network name (SSID) and password or passphrase available to complete the configuration steps below.

- 1 After the printer has been turned on for at least 10 seconds, on your computer connect to the wireless network named **DYMOLWWxxxxxx**, Where **xxxxxx** is the unique name for the printer.

This unique printer name can be found on the sticker on the bottom of the printer.

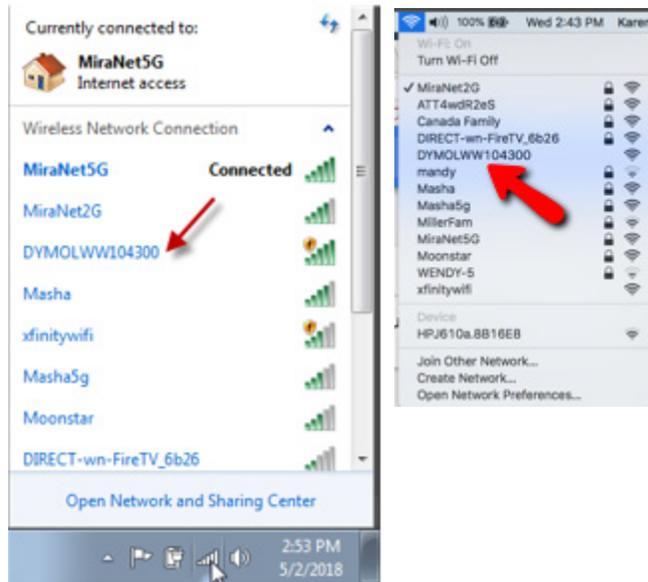

- 2 In a new Internet browser tab, enter the following URL: **http://192.168.58.1** and press **Enter**.

This will open the LabelWriter Web Configuration Utility.




- 3 Log in to the Web Configuration Utility by entering the following username and password and click **Sign in**:

Username: **admin**


Password: **admin**



- 4 On the **Name your Printer** page, click **Next** to accept printer name.

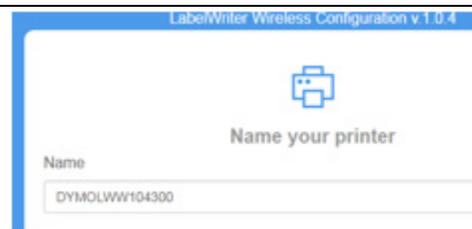


- 5 On the **Connect your printer** page, click **Next** to accept the recommended DHCP connection.

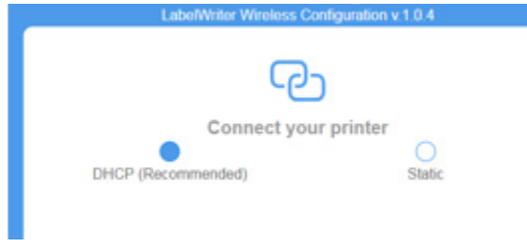

- 6 On the **Connect your printer to a wireless network** page, click **Connect** next to the name of the wireless network you want to connect your printer to.


This should be the same wireless network that the computer you will print labels from is connected to.

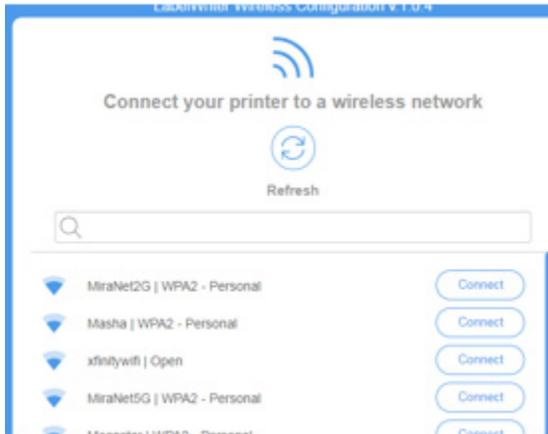

- 7 When prompted, enter the password or passphrase for this wireless network and click **Connect**.

A progress message will show the status while connecting to the network.

When connected, a confirmation message will display.

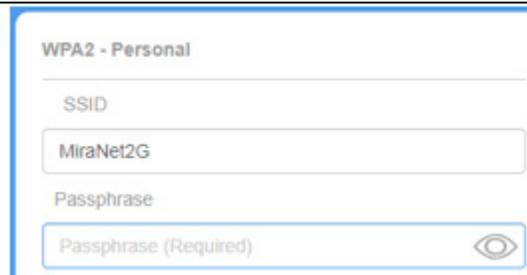


- 8 When the confirmation message appears, write down the IP Address given at the bottom of the screen for future reference.

Your printer is now connected to your wireless network.




- 9 On your computer, make sure that you have reconnected to the wireless network you just connected your printer to. This should happen automatically.

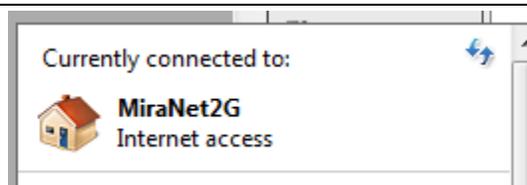


Printing Labels from DYMO Label Software on your Computer

Make sure your computer is on the same wireless network as the LabelWriter Wireless printer.

- 1 If you haven't already done so, download and install the latest version of DYMO Label software from the Support area of the DYMO.com web site.

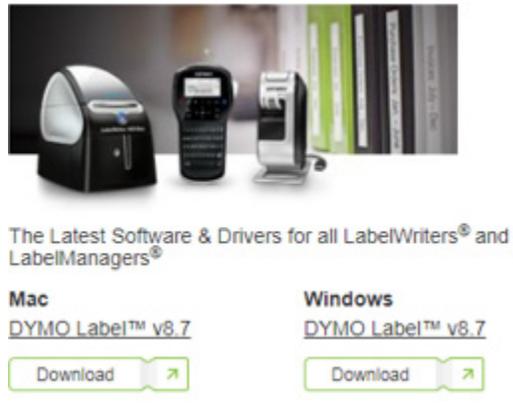

- 2 Start the software and do one of the following:
 - If this is the first DYMO label printer installed, click **Yes** when prompted by the software to add the label printer as a wireless printer.
 - If a DYMO label printer is already installed, choose **Add Network Printer** from the **File** menu.

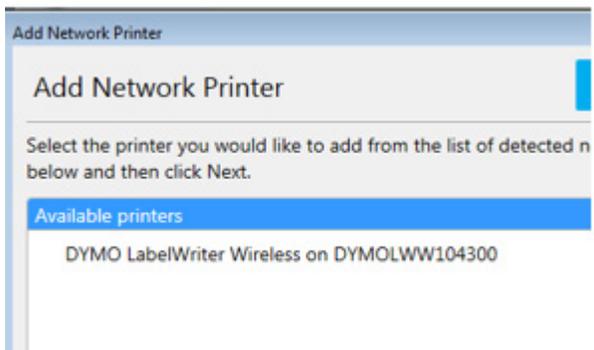

- 3 Follow the instructions in the **Add Network Printer** tool.
- 4 When the printer is successfully installed, the LabelWriter Wireless printer should automatically be selected as the current printer in the printer list.




Printing Labels from DYMO Connect on your Mobile Device

Make sure your mobile device is connected to the same wireless network as the LabelWriter Wireless printer.


- 1 Download and install the latest version of DYMO Connect from the Apple or Google App store.

- 2 On your mobile device, tap  to open the app.
If the LabelWriter Wireless is selected as the current printer, you are ready to print labels.

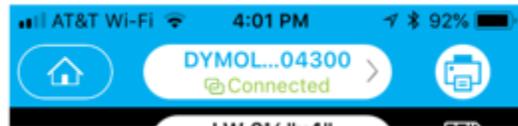


- 3 If the LabelWriter Wireless label printer is not automatically selected as the current printer, tap  to select a printer.

The printer selection screen appears.

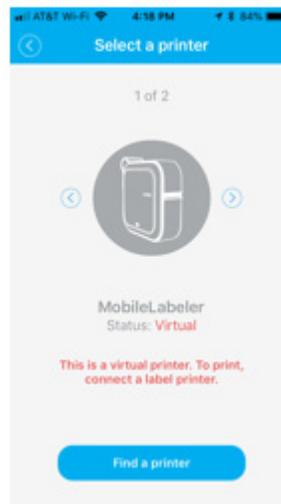

- 4 Tap Find a printer and then select LabelWriter.

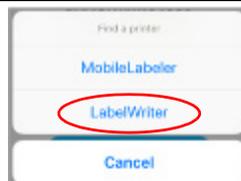

- 5 Tap the LabelWriter Wireless printer.
This printer should now show as the currently selected printer.

